



PB9000 4K Over IP

AV Matrix/VideoWall/IP KVM

User Guide

WWW.AAVARA.COM

AAVARA INNOVATION CORP.

ALL RIGHTS RESERVED

Rev 2.0.6

Table of Contents

I. PB9000 models:	3
II. Ethernet Switch Setting	3
III. PB9000 Hardware Installation	3
IV. Integrate with 3rd Party Controller	4
V. User Scenario - Use IR Remote/Dip Switch to Switch Video Channel	5
VI. IP Setting, Web Configuration & Control.....	6
VI.A. To Know IP address of Aavara HDMI Over IP Sender and Receiver.....	6
VI.B. Launch AV Master Control Web page	6
VI.C. Change IP address of Sender and Receiver	7
VII. Aavara AV Master Web Interface	8
VII.A. User Login	8
VII.B. Setup within AV Master Web Interface	10
VII.C. Setup & Backup by CSV files.....	12
VII.D. Device IR Command Learning	19
VII.E. Multicast	20
VII.F. Matrix.....	20
VII.G. Multicast Group	21
VII.H. Click Apply ButtonVideoWall Setup.....	22
VII.I. VideoWall	23
VII.J. Control.....	24
VII.K. EDID Manager (Only Available on Sender).....	25
VII.L. User Management	27

Information in this document is subject to change without notice.

© 2021 Aavara Innovation Corp. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Aavara Innovation Corp. is strictly forbidden.

Trademarks used in this text: Aavara, the Aavara logo and Aavara AV Master are trademarks of Aavara Innovation Corp.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Aavara Innovation Corp. disclaims any proprietary interest in trademarks and trade names other than its own.

I.PB9000 models:

Model	PB9000-SE+	PB9000W-SE	PB9000HD-SE	PB9000-R
Sender/Receiver	4K Sender	EU Wall-Plate Sender	1080p Sender	Receiver
Max. Video Format	4K60Hz 4:2:0 Input	4K60Hz 4:2:0 Input	1080p60Hz 4:4:4 Input	4K30Hz 4:4:4 Output
Max. Audio Format	7.2 ch LPCM/Dolby ATMOS/DTS X			
Video Connector	HDMI/VGA Input, HDMI Loop out	HDMI/VGA Input	HDMI/VGA Input, VGA Loop out	HDMI/VGA Output
Audio Connector	3.6mm Line In/Line Out, S/PDIF Optical Out	3.6mm Line In/Line Out	3.6mm Line In/Line Out	3.6mm Line In/Speaker Out
RS232 Connector	DB15 x 1	DB15 x 1	DB15 x 1	DB15 x 1
IR Connector	IR Emitter Jack x 1 IR Receiver Jack x1	IR Emitter Jack x 1 IR Receiver Jack x1	IR Emitter Jack x 1 IR Receiver Jack x1	IR Emitter Jack x 1 IR Receiver Jack x1
USB Connector	USB Type B x 1	USB Type B x 1	USB Type B x 1	USB Type A x 4

II.Ethernet Switch Setting

1. Please select Layer 2/3 managed/smart switch to work with Aavara 4K Over IP.
2. Enable **IGMPSnooping (Version 2)** and have all senders/receivers in **same VLAN group**.
3. Enable **JumobFrame (at least 8Kb)** on all ethernet switches.
4. Enable IGMP Querier on major switch and disable Fast Leave on all switches, if multiple ethernet switches installed.

If be sure network bandwidth between switches enough for video network, can use Fiber connection or set **802.3ad Port Trunking/Link Aggregation** to increase bandwidth between switches.

5. If Ethernet switch is also use for other service like PC network or Voice Over IP:
 - Set different VLAN groups to divide different network service.
 - For RJ45 ports or Fiber ports used for other services, set **IGMP Blocked** (HP switch) or **Multicast Forward Forbidden** (Cisco switch), to avoid video streaming data affect.
6. Be sure to save the above setting before rebooting ethernet switch.

III.PB9000 Hardware Installation

1. Connect all Senders and Receivers to Gigabit Switch by Cat5e/6 cables and connect to video source and TV/Display with HDMI cables.
2. [Optional] Connect IR emitter cables & IR Receiver cables to Sender/Receiver's IR Emitter/Receiver Jack. IR emitter cable to IR emitter jack, IR receiver cable to IR receiver jack. And, point IR emitter head of IR emitter cable to device IR receiver window, IR receiver head of IR receiver cable to IR remote location and keep clear line of sight in between.
3. [optional] Connect RS232 cables between PC/controller to Senders, TV/Displays to Receivers.
4. [optional] Connect USB cables between PC/server to Senders and plug USB Keyboard/Mouse or other USB devices to Receiver's USB port.
5. Plug-in DC power adapter to all Senders and Receivers. Units power on.
If PoE switch or PoE injector connected, then it's not necessary to plug-in DC power adapter.
6. Power on all Video Sources and start to play video.

IV.Integrate with 3rd Party Controller

PB9000 supports following major 3rd party controller's integration:

- Control 4, AMX, Crestron, Extron, RTI, Elan g!, Neets and more.

Aavara provides controller driver that allows 3rd part controller to control Aavara HDMI Over IP sender and receiver by IP command directly.

Please check Aavara representative or your distributor for 3rd party driver and user instruction.

V. User Scenario - Use IR Remote/Dip Switch to Switch Video Channel

Use Aavara 16 channel IR remote (Optional accessory) /Dip Switch control to control PB9000-RE receiver and switch video channel. User can also use a 3rd party universal IR remote to learn from Aavara IR remote's IR code and video source IR remote code for controlling both devices by one remote.

1. To config Sender Video Channel Dip switch, at front bezel, to a Unique video channel configuration as following table. Recommend that start from video channel 1 then follow the sequence on every sender. Reboot sender for new video channel setting and apply.
2. [Must] Plug-in IR receiver cable to PB9000-RE receiver IR receiver jack and toward to IR remote location with clear line of sight.
3. [optional] Plug-in IR emitter cable to PB9000-SE sender IR Emitter jack and toward to video source device IR receiver window if need IR control from TV/Display side.
4. Use IR remote of PB9000-RE or use 3rd party universal remote control (preconfigured with PB9000-RE IR remote), toward IR receiver which connected to PB9000-RE IR.

Video Channel Matching Table

Receiver OSD Video Channel #	Sender Dip Switch Setting	Receiver OSD Video Channel #	Sender Dip Switch Setting
1		9	
2		10	
3		11	
4		12	
5		13	
6		14	
7		15	
8		16	

Notice:

Maximum 16 video channels / sender / video sources allow at this scenario, number of TV/Displays is almost unlimited.

IR remote control way is not compatible with Aavara AV Master Web Interface and 3rd party controller control, please don't mix use other control ways.

Once use Web interface Setup then Dip Switch setting will be ignored!

VI.IP Setting, Web Configuration & Control

VI.A. To Know IP address of Aavara HDMI Over IP Sender and Receiver

Aavara HDMI Over IP sender and receiver have factory default IP within 169.254.xxx.xxx C class range, and netmask 255.255.0.0, IP address of each HDMI Over IP unit can be found by following way:

Unit IP Show On Screen OSD:

1. To set up a sender, connect to a receiver by Cat5e cables (can be with or without Ethernet switch in between).
2. Receiver connected to a TV or Display with a HDMI cable.
3. Power on Sender, Receiver and TV/Display.
4. On right bottom of screen, it will show:
 - Local IP Receiver IP address
 - Remote IP Sender IP address
5. Then, please connect the sender to a PC/Notebook RJ45 port with a Cat5e cable, then power on.
6. To set PC/Notebook RJ45 port IP configuration as follow:
 - IP address: 169.254.0.100 (or any IP within 169.254.xxx.xxx range)
 - Netmask: 255.255.0.0

Or

Finding unit and IP in Bonjour Browser

Software Required:

1. **Apple Bonjour SDK** free download from Appple SDK web site, if you are using MS windows OS PC/NB. Apple MacPro or MacBook which don't need it, had built-in OS X.
 - can download from Apple developer web site
2. **Bonjour Browser** for easy find out all senders and receivers on network.
 - Just google and download from Internet

1. To set PC/Notebook RJ45 port IP configuration as follow:
 - IP address: 169.254.0.100 (or any IP within 169.254.xxx.xxx range)
 - Netmask: 255.255.0.0
2. Setup all Cat5e cable connection between PC/Notebook, sender, receiver and Ethernet switch, then power on.
3. [optional] Install Apple Bonjour SDK on your MS Windows PC/Notebook.
4. Launch Bonjour Browser and check HTTP service section. All Aavara HDMI Over IP sender and receiver can be found at following domain name:

- Sender	Aavara-gateway0000.local	0000 represent video channel number
- Receiver	Aavara-clientAAAAAAAAAAAA	AAAAAAAAAAAA represent MAC address of receiver

VI.B. Launch AV Master Control Web page

[http://\[unit ip\]/cfg.html](http://[unit ip]/cfg.html) Unit configuration web page (needed only when you want to change unit IP)

[http://\[unit ip\]/index.html](http://[unit ip]/index.html) Aavara AV Master /Control web page

VI.C. Change IP address of Sender and Receiver

Aavara HDMI Over IP sender and receiver got factory default IP within 169.254.xxx.xxx C class range, and netmask 255.255.0.0. Recommend to set static IP to each box to know which one is which one on network. IP address of each HDMI Over IP unit can be changed by following way:

1. Launch Web browser with following URL, the Unit Web page will show:

http://[unit ip]/cfg.html

The screenshot shows the 'IP Setup' configuration page in the Unit Web interface. At the top, there is a navigation bar with tabs for 'System', 'VideoWall', 'Network', and 'Functions'. The 'Network' tab is currently selected. Below the navigation bar, the 'IP Setup' section is displayed. It includes an 'IP Mode' selector with three options: 'Auto IP', 'DHCP', and 'Static'. The 'Static' option is selected. Below the mode selector, there are three input fields: 'IP Address' (192.168.0.86), 'Subnet Mask' (255.255.255.0), and 'Default Gateway' (192.168.0.1). An 'Apply' button is located at the bottom right of the configuration area.

3. Change IP Mode to Static

- IP Address: Please assign a IP with correct format. (Ensure all boxes' IP are at same C or D class range).
- Subnet Mask: 255.255.0.0 or base on proper ethernet network planning.
- Default Gateway: Only if need, please refer gateway setting on Router.

4. Click Apply Button to save new setting, but unit need to reboot to get new setting effect.

5. Click System Tab → Utilities → Click Reboot button, reboot.

The screenshot shows the 'Utilities' section in the Unit Web interface. At the top, there is a navigation bar with tabs for 'System', 'VideoWall', 'Network', and 'Functions'. The 'System' tab is currently selected. Below the navigation bar, the 'Utilities' section is expanded, showing three sub-sections: 'Version Information', 'Update Firmware', and 'Utilities'. The 'Utilities' sub-section is highlighted in green. Below the 'Utilities' sub-section, the 'Commands' section is displayed, containing two buttons: 'Factory Default' and 'Reboot'.

VII. Aavara AV Master Web Interface

Aavara AV Master Web interface, built-in in every Aavara HDMI Over IP unit, is a one web page setup and control entire HDMI Over IP AV Matrix and Video Wall. It will only need to configure and operate Aavara AV Master Web Interface on One unit then that unit will become master control unit of entire system, usually recommend that use first sender, then all rest of units just take order.

To Connect Aavara AV Master Web Interface via PC/Tablet connect to same ethernet Switch/Wifi AP with following IP setting:


- IP address: any no conflict IP within same C or D class IP range with all senders and receivers.
- Netmask: 255.255.0.0 or value base network configuration that allow all unites can see each other.
Factory default IP range is 169.254.xxx.xxx netmask 255.255.0.0
Or, same static IP range had been set on boxes.
- Web browser: recommend Google Chrome, Firefox, Safari

Launch Web browser with following URL (domain name of sender at channel 0, default sender setting):

<http://aavara-gateway0000.local>

VII.A. User Login

Every time when launches web browser and Aavara AV Master Web page, it will ask user to login.

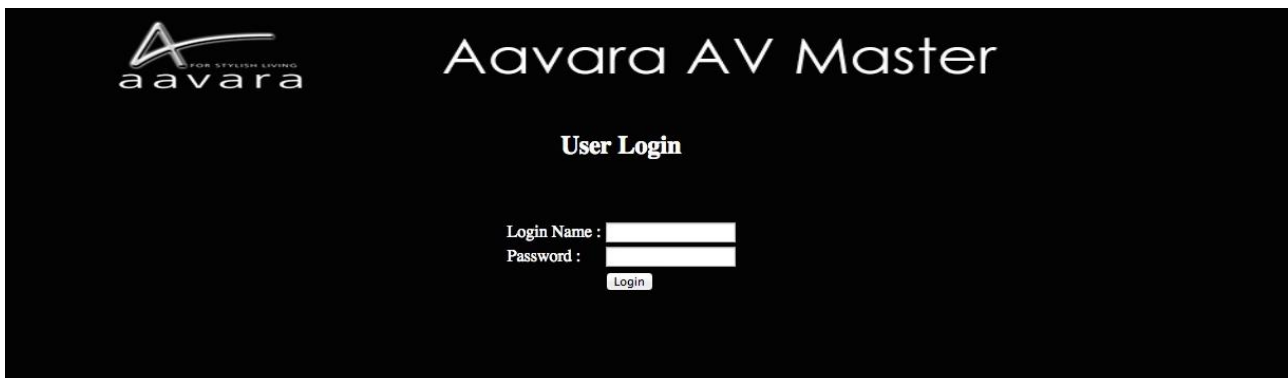


System Default Login name and Password (Can be revised or deleted later on at User Management Tab) with Administrator authorization.

Login name: adm
Password: adm

After Login, on right top corner will show Login User info and Logout button.


User with **Administrator** authorization will see both AV Matrix/VideoWall/Control Operation and All Setup functions.

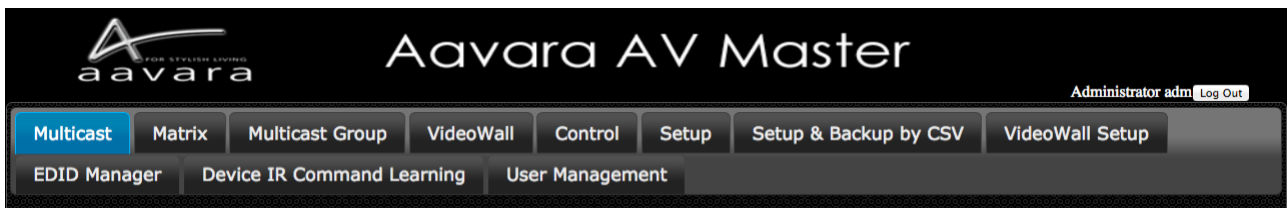

User with **Operator** authorization will see AV Matrix/VideoWall Operation functions only.



Only User with **Administrator** Authorization allow to access unit configuration `cfg.html`

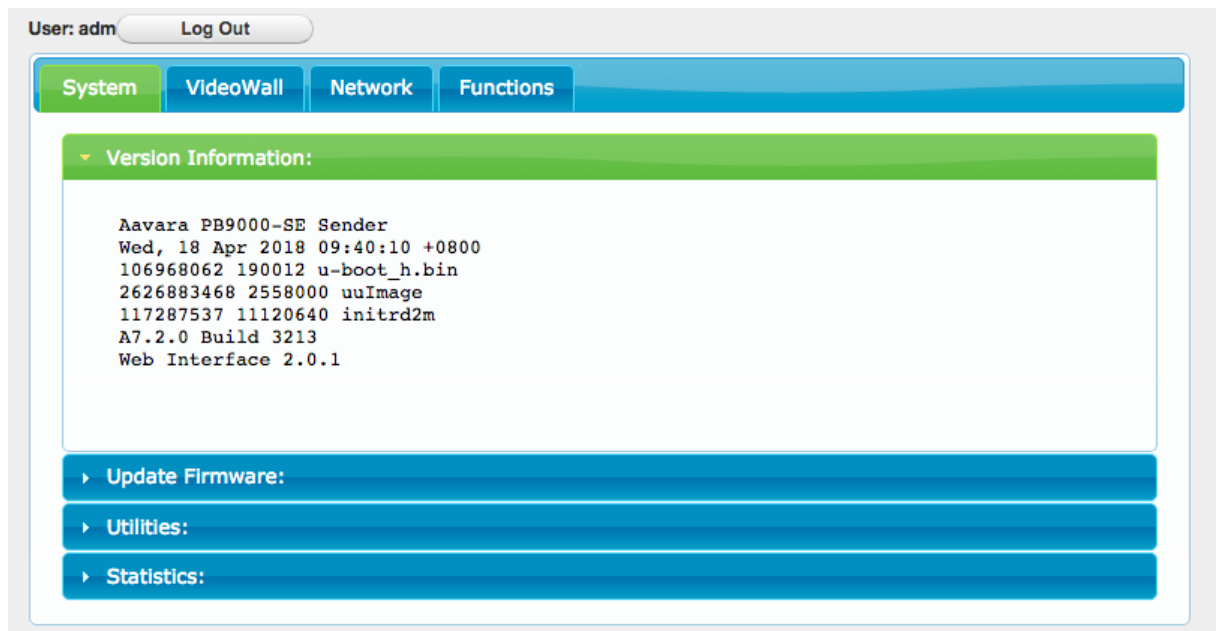

Access other units' web page other than master control unit, will redirect web page/URL to master control unit's web page.

Once User Session expired, AV Master Web Interface will ask user to login again.

VII.B. Setup within AV Master Web Interface

Click on Setup Tab at first time of installation and then configuration will change accordingly, wait few seconds, AV Master will scan and list all Senders and Receivers. Please configure all parameters for Senders and Receivers based on your requirements of installation & operation, details as table below. All settings will store in this Sender or Receiver only and later on operation will connect to this Sender/Receiver's web page only.

If any USB or RS232 setting changed, the unit will need to reboot to get new setting take effect.

For Device Control Command code setup, need to be done by CSV file uploading way as next section show.

The screenshot shows the Aavara AV Master web interface. The top navigation bar includes tabs for Multicast, Matrix, Multicast Group, VideoWall, Control, Setup (selected), Setup & Backup by CSV, and VideoWall Setup. Below this are sub-tabs for Video By Channel, Device IR Command Learning, and User Management. The main content area is titled 'System Setup' and is divided into two sections: 'Video Source/Sender Setup' and 'Display/Receiver Setup'.

Video Source/Sender Setup:

Channel	IP	Group	Codename	USB	Reset EDID	Max. Bit Rate	Video Input Select	Audio Input Select	Device Control ID	RS232 Mode	RS232 Baudrate
1	169.254.8.16	Movie	Media_Player	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Auto	HDMI	Auto Detect	1	Pass-Thru	115200
2	169.254.7.163	Sport	Star_TV	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Auto	HDMI	Auto Detect	0	Pass-Thru	115200

Apply

Display/Receiver Setup:

ID	IP	Group	Codename	USB	HDR 3D Surround	Output Video Format	Video Rotation	Device Control ID	RS232 Mode	RS232 Baudrate
1	169.254.6.65	Residential	Living_Room_TV	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Auto Detect	0	0	Pass-Thru	115200
2	169.254.7.43	Commercial	Signage_Display	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Auto Detect	0	0	Pass-Thru	115200

Apply

Video Source/Sender:

Field	Description
Channel	Range 1 ~ 9999, Auto assign or manual change, each sender must have Unique Channel Number assigned. No two or more Senders got same channel number.
IP	IP Address (Auto assign, or go Unit cfg.html for static IP assign)
Group	Sender's Group name for further management requirement.
Codename	Sender's Codename / Video Source name for further operation required.
USB	Enable (checked) / Disable (unchecked) USB pass-thru
Reset EDID	Reset Sender EDID table to factory default
Max. bit rate	Set Maximum Bit rate on video streaming for bandwidth control Video quality will drop if choose smaller max. bit rate
Video Input Select	Select HDMI or VGA Input for video streaming
Audio Input Select	Select Audio Source from HDMI or Analog Audio Input
Device Control ID	Match Device ID in Device Control CSV File (control by CEC(HDMI)/IR/RS232)
RS232 Mode	IP Command Rs232 command issue by IP command Pass-Thru RS232 command pass-thru between sender and receiver rs232 ports
RS232 Baudrate	Assign RS232 Baudrate , range 115,200 ~ 300 bps

Display/Receiver:

Field	Description
ID	Auto or Manual Assign, Each Receiver must have Unique ID Number assign. No two or more Receivers got same ID number.
IP	IP Address (Auto assign, or go Unit cfg.html for static IP assign)
Group	Receiver's Group name for further management requirement.
Codename	Receiver's Codename / Display name for further operation required.
USB	Enable (checked) / Disable (uncheck) USB pass-thru
HDR/3D/Surround	Enable (checked) / Disable (uncheck) EDID Copy to support HDR, 3D and Surround Sound output (LPCM/Dolby/DTS)
Video Format	- AutoDetect Auto Detect TV/Display's EDID and output recommend video format. - Same as Video Input at Sender side (Pass-Thru) - Fixed HDMI format 2160p30Hz ~ 576p50Hz, 480p60Hz. Fixed DVI format 1920x1200@60Hz , 1440x900@60Hz and more.
Video Rotate	Video Rotate 0, 90, 90 stretch, 180, 270 degree, vertical/horizontal mirror
Device Control ID	Match Device ID in Device Control CSV File (control by CEC(HDMI)/IR/RS232)
RS232 Mode	IP Command Rs232 command issue by IP command Pass-Thru RS232 command pass-thru between sender and receiver rs232 ports
RS232 Baudrate	Assign RS232 Baudrate , range 115,200 ~ 300 bps

Notice!

1. Please wait for few sec. AV Master will search all senders and receivers on network.
2. Each Sender must be assigned a unique video channel (CH) number. Don't have two senders with same number.
3. Group name and Codename can use English, French, Latin, German, Chinese and Japanese fonts, but it won't be able to show on OSD. Use underscores instead of spaces for the Group name and Codename fields.
4. If USB & RS232 setting changed, the unit will auto reboot to get new settings take effect.

5. If any of HDMI device connected to Sender or Receiver does not support 3D or Multichannel audio, recommend that keep 3D Video & Surround option off to speed up video channel switching and maximum EDID compatibility.

VII.C. Setup & Backup by CSV files

Setup by CSV Files


1. Please set static IP on every each unites, at each units' cfg.html, refer IP setting section for more detail.
2. Login user with Administrator authorization.
3. Refer following CSV files detail to plan and edit in Spreadsheet application. Then, save at CSV file format (divide field by a comma.)
4. Upload CSV files one by one.
5. Press button Updating all other unites. This step will take long time to update if large scale matrix/VideoWall installed, please be patient.
6. Reboot all unites after CSV files uploaded and all units updated.

Backup by CSV Files

1. Click Backup Current Setting Button. AV Master will collect all setting and convert into CSV files. Web Page will show Sender/Receiver/Control Download CSV file URLs.
2. Click the URL to download current CSV files.

Replace AV Master Master Control Unit

1. Get a new unit of sender or receiver.
2. Change IP setting to be same as the old Master Control Unit, refer IP setting section for more detail.
3. Upload Sender/Receiver/Device Control CSV Files
4. The unit is ready to replace the old Master Control Unit.

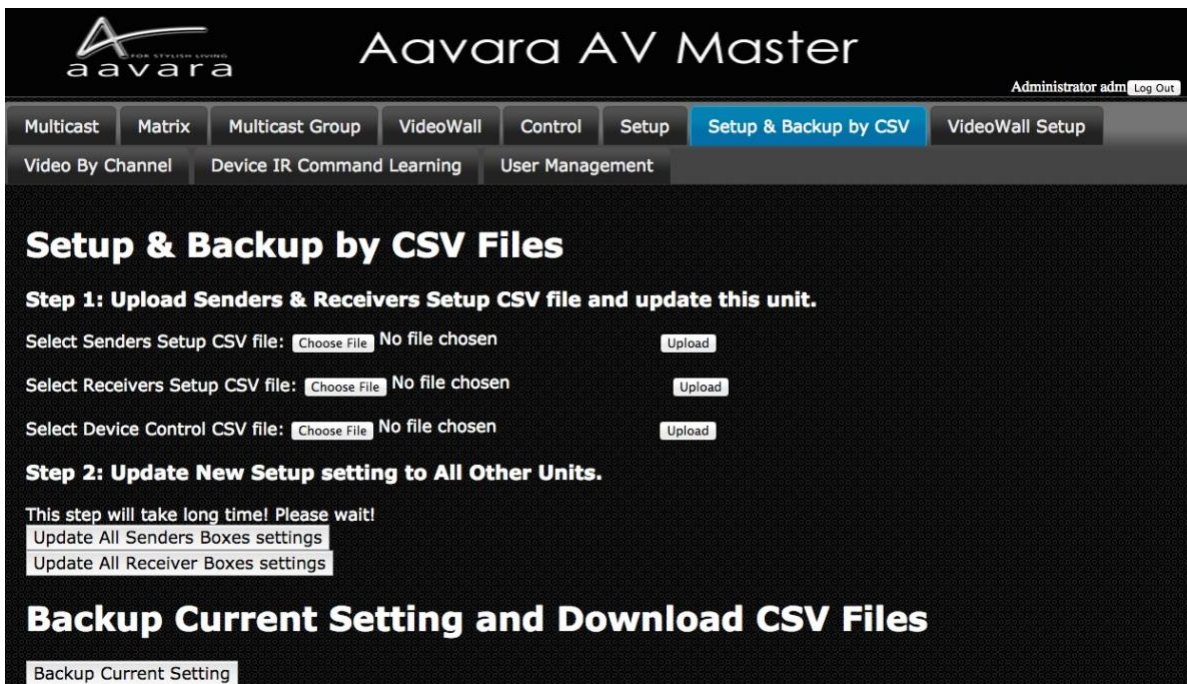

The screenshot displays the Aavara AV Master web interface. At the top, the logo and name 'Aavara AV Master' are visible, along with the user 'Administrator adm' and a 'Log Out' link. A navigation menu includes 'Multicast', 'Matrix', 'Multicast Group', 'VideoWall', 'Control', 'Setup', 'Setup & Backup by CSV' (highlighted), and 'VideoWall Setup'. Below the menu, there are sub-menus for 'Video By Channel', 'Device IR Command Learning', and 'User Management'. The main content area is titled 'Setup & Backup by CSV Files' and is divided into two steps:

Step 1: Upload Senders & Receivers Setup CSV file and update this unit.

Select Senders Setup CSV file: No file chosen

Select Receivers Setup CSV file: No file chosen

Select Device Control CSV file: No file chosen

Step 2: Update New Setup setting to All Other Units.

This step will take long time! Please wait!

Backup Current Setting and Download CSV Files

Sender CSV File Format & Parameter Description

Don't change field sequence. First row field name can be changed. Use comma to divide field when saving CSV file.

Field / Parameter	Description	Parameter Value
IP	Sender IP	ie. 169.254.8.105 192.168.1.25
Channel	Assign unique channel number, don't duplicate.	1 ~ 9999
Group	Sender Group name	English, German, French, Latin, Chinese, Japanese, _
Codename	Sender Codename	English, German, French, Latin, Chinese, Japanese, _
Enable/Disable USB Pass-Thru	USB Pass-Thru between Sender and Receiver	y/n only (Lower letters only) y : disable USB Pass-thru n : enable USB Pass-thru
Max. Bit Rate	Max. bit rate of video streaming from Sender	Parameter value options: auto : auto, max. 850Mbps 200M : max.200Mbps 150M : max.150Mbps 100M : max.100Mbps 50M : max. 50Mbps 10M : max. 10Mbps 5M : max. 5Mbps
Video Input Select	Select video input on sender for video streaming	Parameter value options: 0 : VGA 1 : DVI 2 : HDMI
Audio Input Select	Select audio input on sender for audio streaming	Parameter value options: hdmi : HDMI audio analog : analog audio auto : auto select (analog first)
Device Control ID	To match Device ID in Device Control CSV File	Number must be match match Device ID in Device Control CSV File
RS232 mode	IP Command Pass-Thru between sender and Receiver	Parameter value options: y : IP Command n : Pass-Thru
RS232 baudrate	RS232 baudrate setting	Parameter value options: 115200/57600/38400/28800/19200/14400/9600/4800/2400/1200/600/300

Receiver CSV File Format & Parameter Description

Don't change field sequence. First row field name can be changed. Use comma to divide field when saving CSV file.

Field / Parameter	Description	Parameter Value
IP	Receiver IP	ie. 169.254.8.105 192.168.1.25
ID	Receiver ID, No duplicate	Number only, start form 1
Group	Receiver Group name	English, German, French, Latin, Chinese, Japanese, _
Codename	Receiver Codename	English, German, French, Latin, Chinese, Japanese, _
Video channel	Video channel	Number only, start from 1
Audio channel	Audio channel	Number only, start from 1
Video channel	USB channel	Number only, start from 1
RS232 channel	RS232 channel (RS232 mode must be set Pass-Thru)	Number only, start from 1
IR channel	IR channel	Number only, start from 1
Output Video Format	Assign Receiver HDMI output video format	Parameter value options: auto_detect : Auto detect TV/Display EDID pass-thru : same as HDMI input at sender 0 : same as HDMI input at sender (pass-thru) 2160p30 : 2160p30Hz 2160p25 : 2160p25Hz 2160p24_VIC_103 : 2160p24Hz VIC 103 2160p24_VIC_98 : 2160p24Hz VIC 98 2160p24_VIC_93 : 2160p24Hz VIC 93 1080p60 : 1080p60Hz 1080p50 : 1080p50Hz 1080p24_VIC_72 : 1080p24Hz VIC 72 1080p24_VIC_32 : 1080p24Hz VIC 32 1080i60 : 1080i60Hz 1080i50 : 1080i50Hz 720p60 : 720p60Hz 576p50 : 576p50Hz 480p60 : 480p60Hz 1920x1200 : 1920x1200@60Hz 1920x1080 : 1920x1080@60Hz 1680x1050 : 1680x1050@60Hz 1440x900 : 1440x900@60Hz 1400x1050 : 1440x1050@60Hz 1366x768 : 1366x768@60Hz 800x600 : 800x600@60Hz
Enable/Disable USB Pass-Thru	USB Pass-Thru between Sender and Receiver	y/n only (Lower letters only) y : disable USB Pass-thru n : enable USB Pass-thru
Device Control ID	To match Device ID in Device Control CSV File	Number must be match match Device ID in Device Control CSV File
RS232 mode	IP Command Pass-Thru between sender and Receiver	Parameter value options: y : IP Command n : Pass-Thru
RS232 baudrate	RS232 baudrate setting	Parameter value options: 115200/57600/38400/28800/19200/14400/9

		600/4800/2400/1200/600/300
Video Rotate/Stretch	Video Rotate, Mirror & whether need to stretch when rotate at 90 ⁰ /270 ⁰ .	Parameter value options: 0 : Not Rotate 1 : Horizontal Mirror 2 : Vertical Mirror 3 : 180 ⁰ Rotate 4 : 90 ⁰ Rotate, Vertical Mirror, No Stretch 5 : 90 ⁰ Rotate, No Stretch 6 : 270 ⁰ Rotate 7 : 90 ⁰ Rotate, Vertical Mirror, Stretch 8 : 90 ⁰ Rotate, Stretch 9 : 270 ⁰ Rotate, Stretch
vw_row	Total row of VideoWall	Number only, start from 1
vw_column	Total column of VideoWall	Number only, start from 1
vw_pos_row	This Display/Receiver's row position in VideoWall	Number only, start from 1
vw_pos_column	This Display/Receiver's column position in VideoWall	Number only, start from 1
vw_OW	Display outter dim. width unit: mm	Number only, start from 1
vw_OH	Display outter dim. height unit: mm	Number only, start from 1
vw_VW	Display viewable area dim. width unit: mm	Number only, start from 1
vw_VH	Display viewable area dim. height unit: mm	Number only, start from 1

Device Control CSV File Format & Parameter Description

Don't change field sequence. First row field name can be changed. Use comma to divide field when saving CSV file.

Field / Parameter	Description	Parameter Value
Device Control ID	Device Control ID for match with Device Control ID in Sender/Receiver CSV file or Setup Tab in AV Master.	Number Only, start from 1
Codename	Device Codename	English, German, French, Latin, Chinese, and Japanese.
command_type	Way to Control the Device	Parameter value options: cec : HDMI CEC ir : IR rs232_hex : RS232 command in HEX code rs232_ascii : RS232 command in Ascii code
power_on_name	Power On Command Codename	English, German, French, Latin, Chinese, and Japanese.
power_on_cmd	Power On Command	Base on the way to control, and input control command code.
power_off_name	Power Off Command Codename	English, German, French, Latin, Chinese, and Japanese.
power_off_cmd	Power Off Command	Base on the way to control, and input control command code.
cmd1_name	Command 1 codename	English, German, French, Latin, Chinese, and Japanese.
cmd1_cmd	Command 1 command code	Base on the way to control, and input control command code.
cmd2_name	Command 2 codename	English, German, French, Latin, Chinese, and Japanese.
cmd2_cmd	Command 2 command code	Base on the way to control, and input control command code.
cmd3_name	Command 3 codename	English, German, French, Latin, Chinese, and Japanese.
cmd3_cmd	Command 3 command code	Base on the way to control, and input control command code.
cmd4_name	Command 4 codename	English, German, French, Latin, Chinese, and Japanese.
cmd4_cmd	Command 4 command code	Base on the way to control, and input control command code.
cmd5_name	Command 5 codename	English, German, French, Latin, Chinese, and Japanese.
cmd5_cmd	Command 5 command code	Base on the way to control, and input control command code.
cmd6_name	Command 6 codename	English, German, French, Latin, Chinese, and Japanese.
cmd6_cmd	Command 6 command code	Base on the way to control, and input control command code.
cmd7_name	Command 7 codename	English, German, French, Latin, Chinese, and Japanese.
cmd7_cmd	Command 7 command code	Base on the way to control, and input control

		command code.
cmd8_name	Command 8 codename	English, German, French, Latin, Chinese, and Japanese.
cmd8_cmd	Command 8 command code	Base on the way to control, and input control command code.
cmd9_name	Command 9 codename	English, German, French, Latin, Chinese, and Japanese.
cmd9_cmd	Command 9 command code	Base on the way to control, and input control command code.
cmd10_name	Command 10 codename	English, German, French, Latin, Chinese, and Japanese.
cmd10_cmd	Command 10 command code	Base on the way to control, and input control command code.

RS232 HEX code format:

HEX code format can be any one of below:

- FF010204
- FF 01 02 04
- 0xFF 0x01 0x02 0x04
- 0XFF 0X01 0X02 0X04

IR HEX code format:

PRONTO HEX format. Please refer Device IR Learning section for more details.

CEC Preset Commands and Commands in CEC Frame format

Preset CEC Command List:

Video Source		TV/Display	
Command	Description	Command	Description
wake_up	Video Source Device Wake UP	power_on_tv	Display Power On
standby	Video Source Device Standby	power_off_tv	Display Power Off
up	Up		
down	Down		
left	Left		
right	Right		
select_button	Select		
exit	Exit		
root_menu	Root Menu		
play	Play		
stop	Stop		
pause	Pause		
mute	Mute		
volume_up	Volume Up		
volume_down	Volume Down		


If the command wanted is not in above preset list, you can use CEC Frame in command code field.

CEC Frame format ie. 0F:86:10:00 or FF:36

For CEC Frame detail, please check CEC O Matic web site, <http://www.cec-o-matic.com>.

VII.D. Device IR Command Learning

Aavara AV Master Web control can learn Device IR command code, so it can copy n paste into Device Control CSV file.

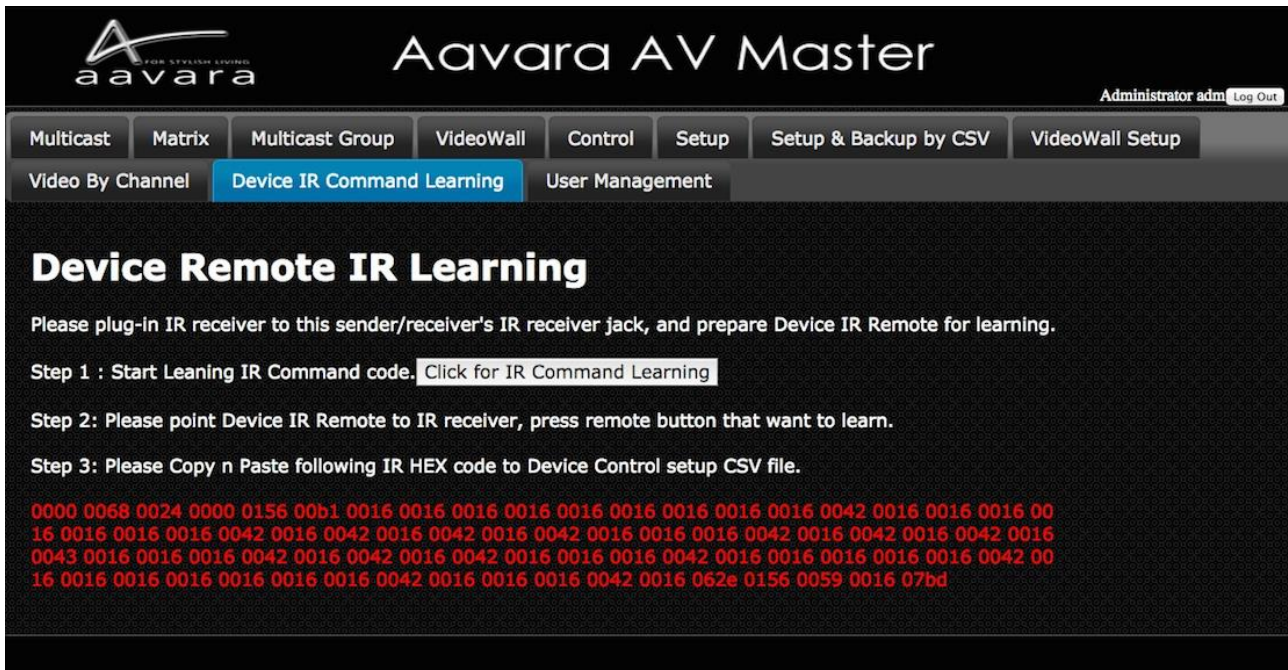

The screenshot shows the Aavara AV Master web interface. At the top left is the Aavara logo with the tagline "FOR CRYSTAL SOUND". The main title "Aavara AV Master" is centered at the top. On the right, it says "Administrator adm" and "Log Out". Below the title is a navigation menu with buttons for "Multicast", "Matrix", "Multicast Group", "VideoWall", "Control", "Setup", "Setup & Backup by CSV", and "VideoWall Setup". Below this is a sub-menu with "Video By Channel", "Device IR Command Learning" (highlighted in blue), and "User Management". The main content area has the heading "Device Remote IR Learning". Below the heading is the instruction: "Please plug-in IR receiver to this sender/receiver's IR receiver jack, and prepare Device IR Remote for learning." There are three steps: Step 1: "Start Learning IR Command code." with a button "Click for IR Command Learning"; Step 2: "Please point Device IR Remote to IR receiver, press remote button that want to learn."; Step 3: "Please Copy n Paste following IR HEX code to Device Control setup CSV file." Below the steps is a block of red text representing the IR HEX code in PRONTO format.

```
0000 0068 0024 0000 0156 00b1 0016 0016 0016 0016 0016 0016 0016 0016 0016 0042 0016 0016 0016 00
16 0016 0016 0016 0042 0016 0042 0016 0042 0016 0042 0016 0016 0016 0042 0016 0042 0016 0042 0016
0043 0016 0016 0016 0042 0016 0042 0016 0042 0016 0016 0016 0042 0016 0016 0016 0016 0016 0042 00
16 0016 0016 0016 0016 0016 0016 0042 0016 0016 0016 0042 0016 062e 0156 0059 0016 07bd
```

- Step 1: Ensure IR Receiver cable had plug into AV Master Master Control unit's IR Receiver jack. And, have Device IR remote on hand ready for IR code learning.
- Step 2: Please point Device IR remote to IR receiver, and press remote button which want to learn IR code from.
Then, IR HEX code (PRONTO format) will show below in red.
- Step 3: Copy n Paste IR HEX code (in red) to the cell of Device Control CSV file for further upload and operation.

VII.E. Multicast

1. Select a video source/sender.
2. Select Service want to switch (Audio, Video, IR, RS232, USB. Multiple choices).
3. Select Display/Receiver want to switch (Multiple choices).
4. Click Apply Button

The screenshot shows the Aavara AV Master web interface. The top navigation bar includes tabs for Multicast, Matrix, Multicast Group, VideoWall, Control, Setup, Setup & Backup by CSV, and VideoWall Setup. Below this, there are sub-tabs for Video By Channel, Device IR Command Learning, and User Management. The main content area is titled 'Video Source Selection' and includes checkboxes for 'Movie' and 'Sport'. Two video source thumbnails are shown: 'CH 1 Media_Player' and 'CH 2 Star_TV'. Below the thumbnails are checkboxes for 'All Service', 'Video &Audio', 'Video', 'Audio', 'IR', 'RS232', and 'USB'. Underneath, there are checkboxes for 'Residential' and 'Commercial' under the heading 'TV/Display(Multiple Selection)'. At the bottom, a table displays the channel configurations.

Switch	ID	Video	Group	Codename	Video Channel	Audio Channel	IR Channel	RS232 Channel	USB Channel
<input type="checkbox"/>	1		Residential	Living_Room_TV	1	1	1	1	1
<input type="checkbox"/>	2		Commercial	Signage_Display	2	2	2	2	2


VII.F. Matrix

- Select Service that you'd like to switch (Audio, Video, IR, RS232, or USB).
Once Select Service to switch, Matrix will refresh to show current routing status.
- Click Switch Button on the cell to match the row of Receiver which you'd like to switch as well as the column of target Sender.



VII.G. Multicast Group

1. Select a video source/sender.
2. Select Service want to switch (Audio, Video, IR, RS232, USB. Multiple choices).
3. Select Receiver Group want to switch (Multiple choices).
- 4.

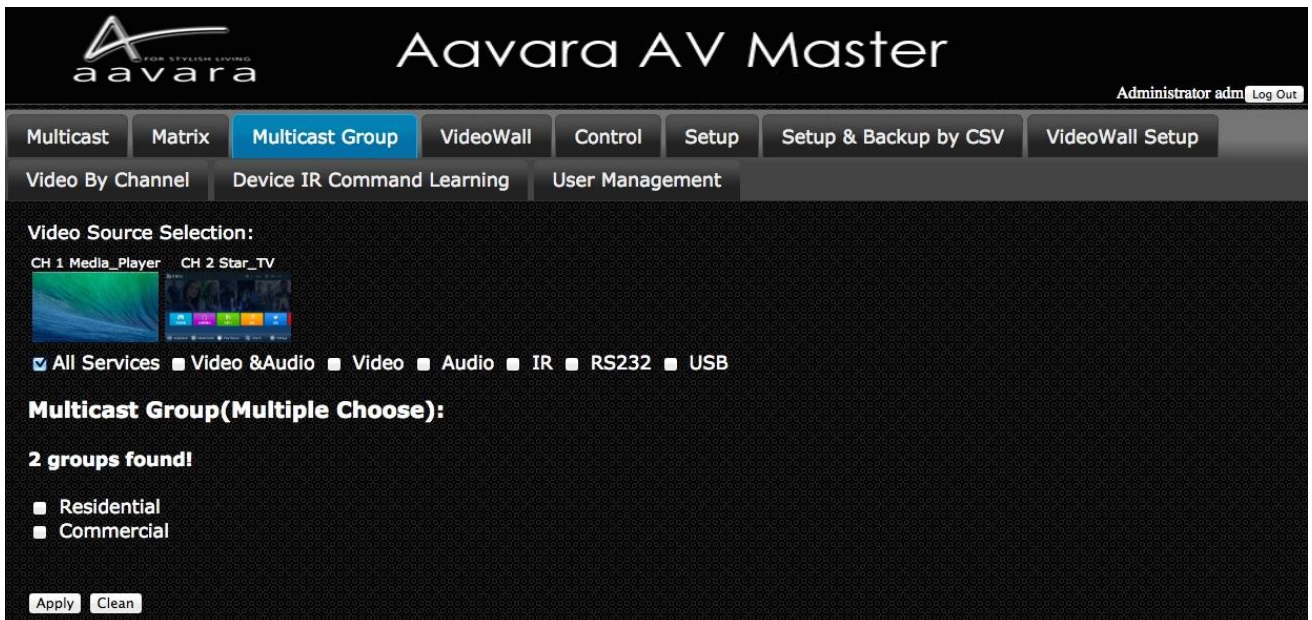

VII.H. Click Apply Button VideoWall Setup

Step 1 VideoWall Layout / Bezel & Gap Compensation

1. Select VideoWall layout from 2x2, 3x3, 3x4, 4x4, ..., 9x9.
2. Input Outer and Viewable area dimension of display for Bezel & Gap compensation. Unit: mm.

Step 2 Display Position at VideoWall Matching

Once Click on Apply Button of VideoWall layout configuration, a table will show up as VideoWall layout, select right receiver in every cell of table which matched row and column display actual position. For position on VideoWall has no display, select N/A.

After all displays/receivers in video wall being located, Click Apply button.

ViewWall Tab will change based on VideoWall layout input and then ready to operate.

Videowall Setup

Videowall layout: **3x3**

Bezel and Gap Compensation

Outer Dimension of Display(unit:mm) Width: **531** Height: **335**

Viewable Dimension of Display (unit:mm) Width: **478** Height: **272**

Apply

	1	2	3
1	1 : 169.254.6.65	2 : 169.254.7.43	N/A
2	N/A	N/A	N/A
3	N/A	N/A	N/A

Apply


VII.I. VideoWall

Once ViewWall Setup completed in VW Setup Tab, VideoWall Tab will show right VideoWall layout selection.

1. Select one of VideoWall Zone Layout selection at left column.

Left cell of Table will show the VideoWall Zone Layout selected.

2. Click one of snapshot image of Video channel at top row and drag to the VideoWall zone you like to show. VideoWall will show layout and video channel you selected.

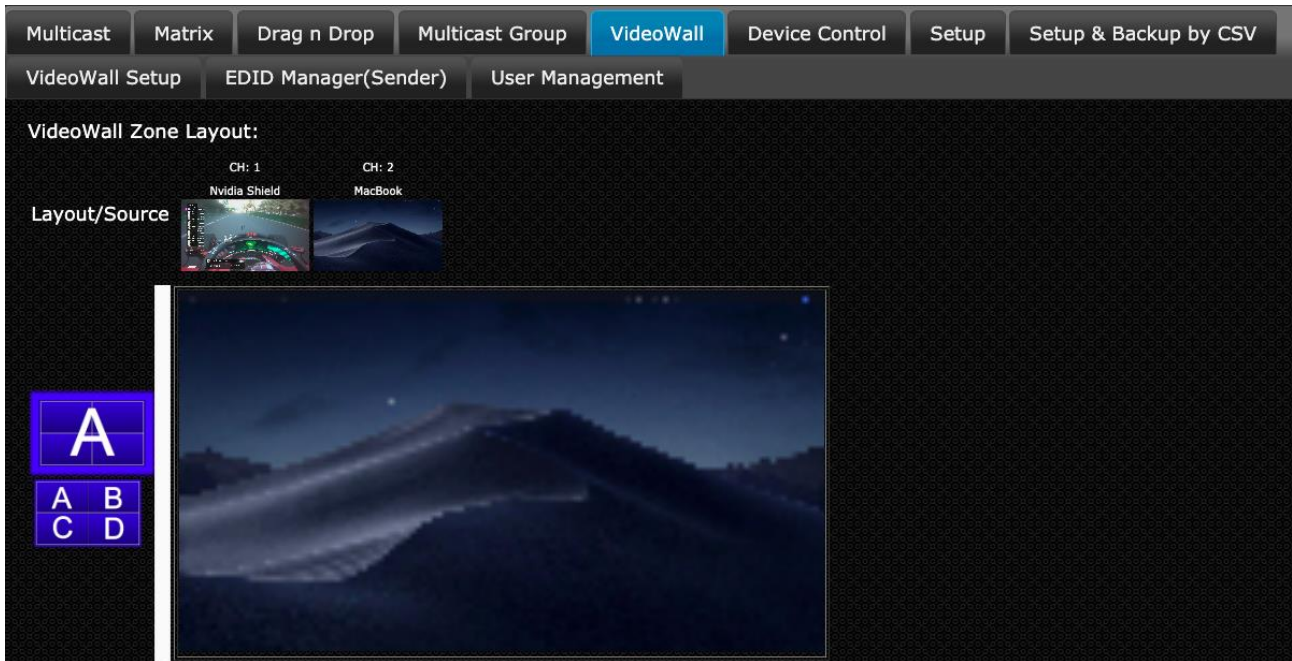

VII.J. Control

Aavara AV Master Web can control external devices like TV/Display/Projector & Video Source Device by CEC(via HDMI connection), RS232 and IR. Please edit and upload Device Control CSV file and set Device Control ID to each sender and receiver, AV Master will bring in all control command buttons of that device.

Click on the button of control action requested, control command will send out to target external device immediately.

Aavara AV Master

Administrator adm | Log Out

Multicast | Matrix | Multicast Group | VideoWall | **Control** | Setup | Setup & Backup by CSV | VideoWall Setup

Video By Channel | Device IR Command Learning | User Management

All Equipments Power On | All Equipments Power Off

Video Source Control

All Video Source Power On | All Video Source Power Off

Video Source	Control Action
1 Media_Player Movie 美海迪播放機 _HiMedia	開機_Power_ON 關機_Power_Off 音量+_Vol_Up 音量-_Vol_Down OK 返回_Exit 上_Up 下_Down 左_Left 右_Right 播放_暫停_Play_Pause 主頁_Root_Menu
2 Star_TV Sport Nvidia_Shield	Wake_Up Standby Up Down Left Right Play Pause Select Mute Volume_Up Volume_Down

TV/Display Control


All TV/Display Power On | All TV/Display Power Off

VII.K. EDID Manager (Only Available on Sender)

Copy Display EDID to Sender

Ensure that target display/receiver has HDMI connection between display and receiver, network connection between sender and receiver, and sender/receiver at same video channel, before Copy Display EDID to sender action.

1. To improve EDID compatibility, add HDR and multi-channel audio support, options as follows:
 - Copy Display EDID w/o any change (Default)
 - Video no change, All Audio Formats
 - 2160p60 HDR w/ All Audio Formats
 - 2160p60 HDR Audio format no change
 - 2160p24 HDR w/ All Audio Formats
 - 2160p24 HDR Audio format no change
 - 1080p HDR w/ All Audio Formats
 - 1080p HDR Audio format no change
2. Select Display/Receiver that you'd like to copy EDID from
3. Click Apply button
4. Display EDID will be copy, send to sender at same channel with receiver, and save at sender. Sender will use this EDID to do EDID handshaking with Video Source Device.

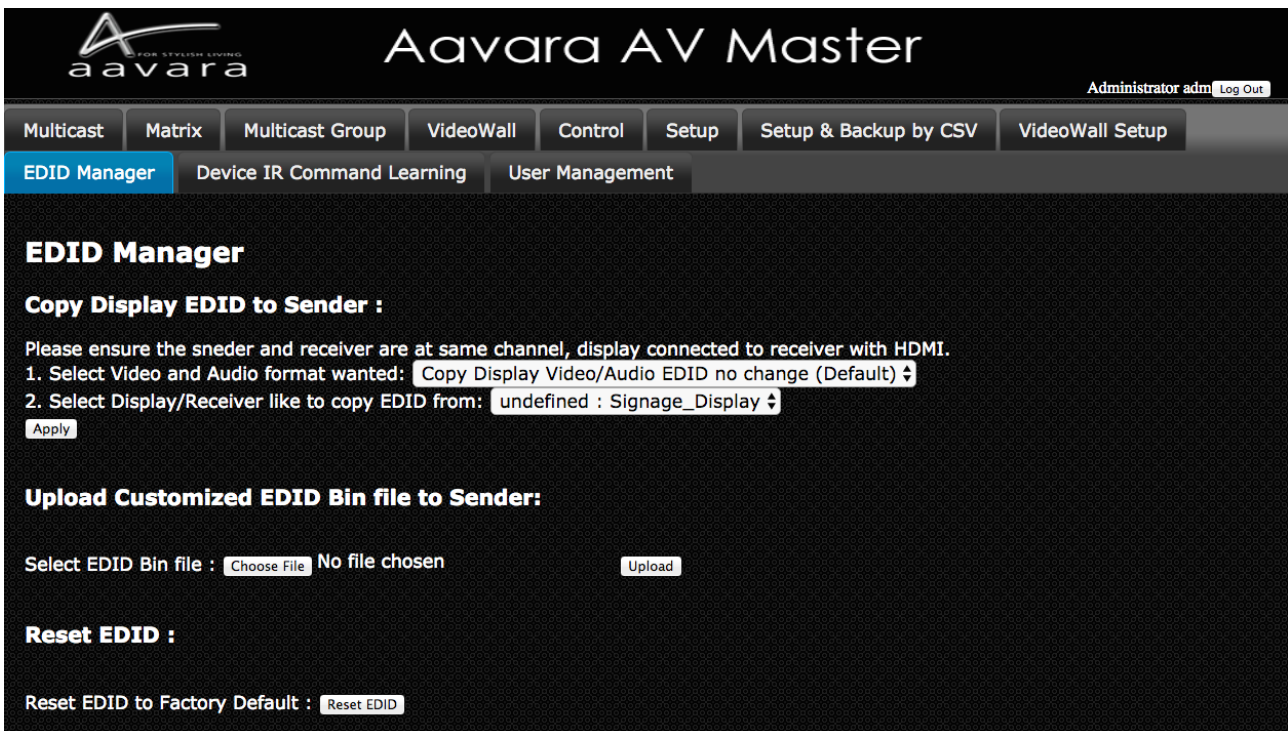

The screenshot displays the Aavara AV Master web interface. At the top, the logo for Aavara is on the left, and the text "Aavara AV Master" is in the center. On the right, it shows "Administrator adm" and a "Log Out" button. Below the header is a navigation menu with tabs: "Multicast", "Matrix", "Multicast Group", "VideoWall", "Control", "Setup", "Setup & Backup by CSV", and "VideoWall Setup". Underneath, there are sub-tabs: "EDID Manager" (which is highlighted), "Device IR Command Learning", and "User Management".

The main content area is titled "EDID Manager". It has a sub-section "Copy Display EDID to Sender :". Below this, there is a warning: "Please ensure the sender and receiver are at same channel, display connected to receiver with HDMI." There are two numbered steps:
1. Select Video and Audio format wanted: A dropdown menu shows "Copy Display Video/Audio EDID no change (Default)".
2. Select Display/Receiver like to copy EDID from: A dropdown menu shows "undefined : Signage_Display".
An "Apply" button is located below these steps.


Below the "Apply" button is another section: "Upload Customized EDID Bin file to Sender:". It includes a label "Select EDID Bin file :", a "Choose File" button, the text "No file chosen", and an "Upload" button.

The final section is "Reset EDID :". It contains a label "Reset EDID to Factory Default :" and a "Reset EDID" button.

Assign Specific Resolution/Timing EDID to Sender

Select and assign Specific Resolution/Timing EDID to Sender for handshake with Video Source device for solving EDID compatible issue or allow video source output video/audio format as assigned.

1. Select Video Format
2. Click Apply Button
3. Recommend that have HDMI unplug n plug-in between video source and sender for good EDID handshake.

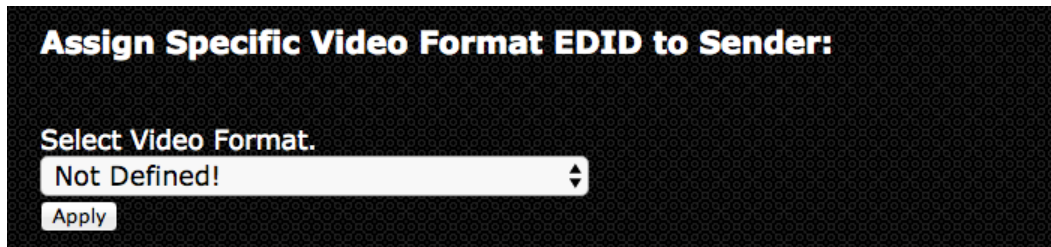

Upload Customized EDID Bin file to SenderEdit customize EDID Bin with EDID editor(not included), then upload to sender. Sender will use customized EDID table to handshake with Video Source device for solving EDID compatible issue or allow video source output video/audio format as assigned.


1. SIs and Installers can use any EDID edit software to customize EDID table and save as standard EDID BIN file.
2. Go **EDID MGR** tab.
3. select customized EDID bin file and Click Upload button.
4. Once Customize EDID BIN file upload completed, please check the HEX code of [EDID used] whether it's same as customize EDID.

Reset EDID to default

Just click on Reset EDID to Default Button, then Sender EDID table with reset to default one.

Download Current EDID

Just click on Reset EDID to Default Button, then Sender EDID table with reset to default one.

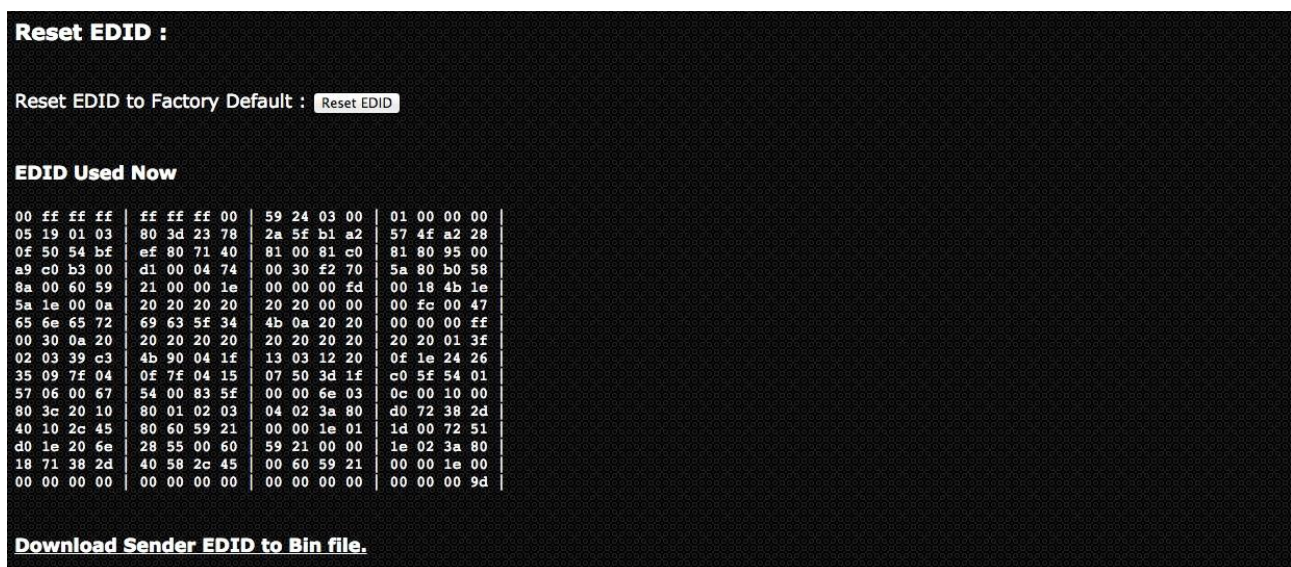

VII.L. User Management

User Management Tab

User Management

3 Users Found!

Add User

Status	User ID	Login Name	User Name	Password	Authorization
Active	1	adm	adm	no_Change_Here	Administrartor
Active	2	nick	Nick_Hsu	no_Change_Here	Operator
Active	3	david	大衛王	no_Change_Here	Operator

Apply

Add User

Press Add User button to add more user info.

Field	Description
Status	3 User Status: 1. Active this user can login and use. 2. Suspend this user can't login and use, but user info will keep in system. 3. Delete Delete this user, and user info will erase.
User ID	Every User need to assign a ID, no duplicate.
Login Name	Use for login, English and number letters only.
User Name	Use to identify user. English, German, French, Latin, Chinese, Japanese are accepted.
Password	User Password, English & number only. Once real password input and updated, it will not show on web again. Every time User Management table refresh, it will show "no_Change_Here". As long as "no_Change_Here" not change, password will not change.
Authorization	Two User Authorization: - Administrator can access all operation and setup functions. - Operator can access all operation functions only.

Notice! If many senders and receivers installed, once click Apply button, user info updating will take some time, please wait for user info update completed.